



The installation of the Windsor Independent model Walk-in Bath

A couple of tips to keep in mind!





## Transport the bath after delivery:

1. Baths transported upright on the pallet will have screws holding 2 legs of the bath to the pallet. These need to be removed so the bath can come off the pallet.
2. Remove the side panels so you can use the bath frame to move it in its installation spot



## Tap and spa power point installation

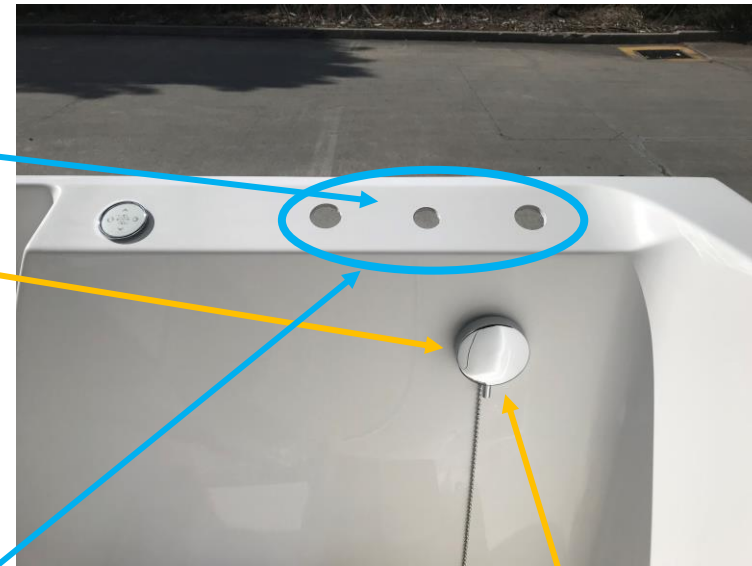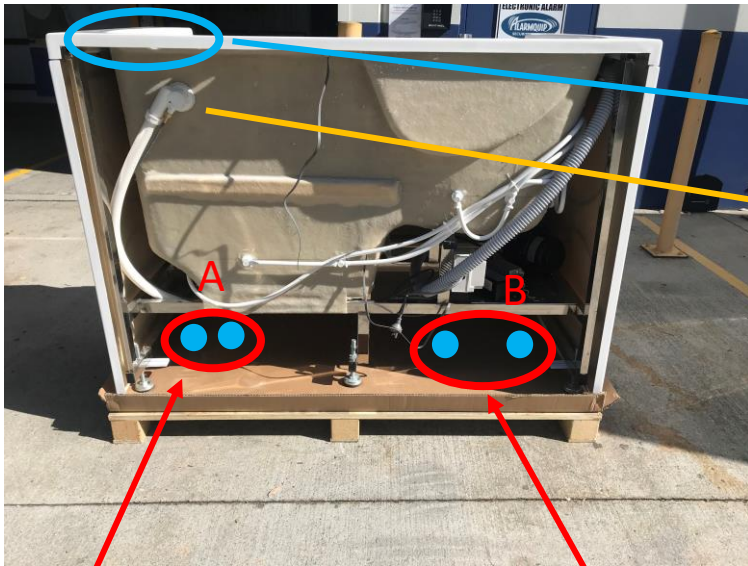

Tap set holes

Overflow

An IP65 (outdoor) rated single power point is required only if the spa option is bought


A: Suggested water OR power point location A.  
200mm from the floor, 300mm from the side panel.  
Access circle is 100mm high and 200mm wide

B: Suggested water OR power point location B.  
200mm from the ground, 300mm from the side panel  
Access circle is 150mm high and 200mm wide

Each bath is supplied with a high flow spout and ¼ turn tap handles.

These are WaterMark compliant!

Feet adjustment – front middle leg is key! Use it to adjust the door space so the door closes easily and properly (then the seal works best!).  
Adjust the other legs around the middle front leg.

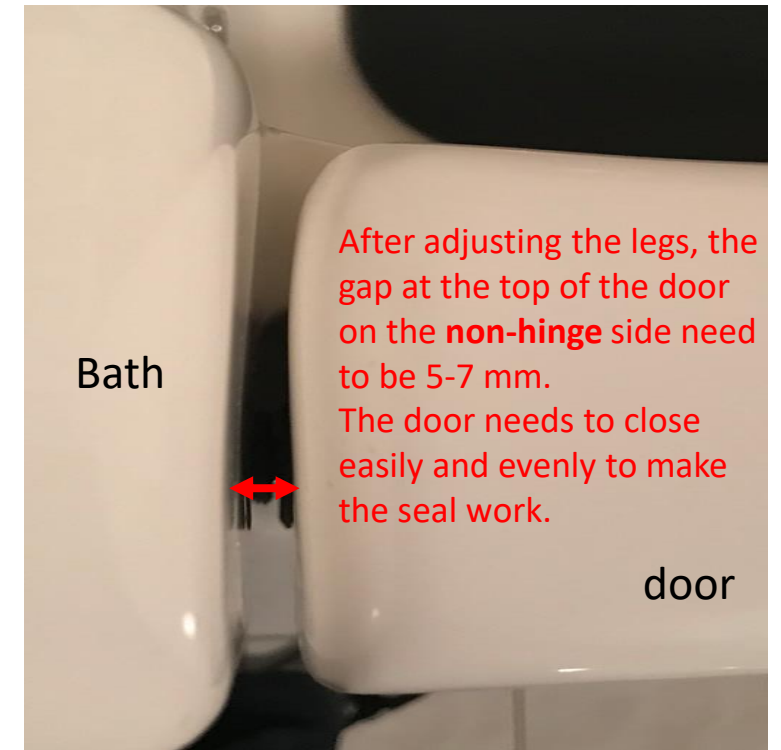

Connecting the waste – each bath is supplied with a 1 meter flexible drain hose. Use this and not a fixed pipe! The hose provides “give” as the bath is a stand alone unit – it avoids risk of leaks





Any questions?

Call/text us on Mob 0455 522 566!

