



The installation of the Windsor Access model walk-in bath
A couple of tips to keep in mind!





NOTE: This guide is based on an Access bath with a right-handed door, see above. If you are installing a left-hand sided door, you will need (!!) to mirror the install images in this guide on pages 3 and 5 of this guide!

Transport the bath after delivery:

1. Baths transported upright on the pallet will have screws holding 2 legs of the bath to the pallet. These need to be removed so the bath can come off the pallet.
2. Remove the side panels so you can use the bath frame to move it in its installation spot



Tap and spa power point installation

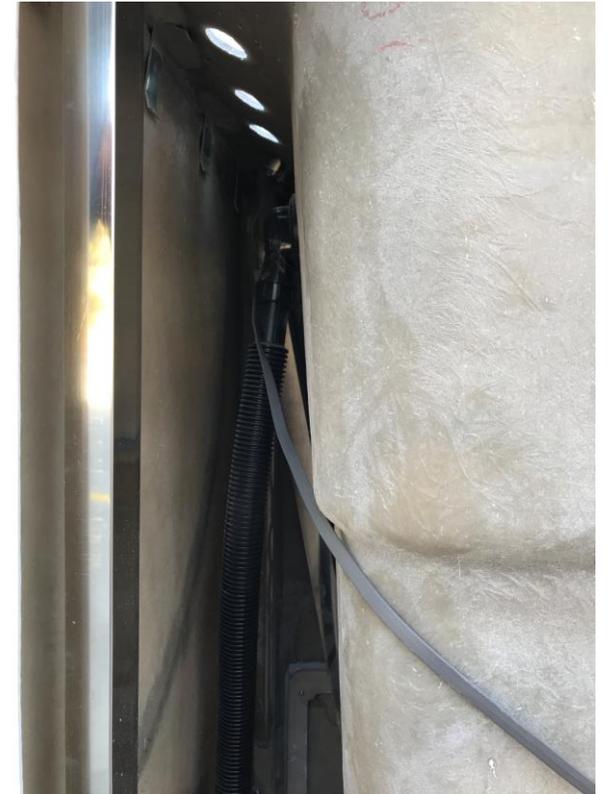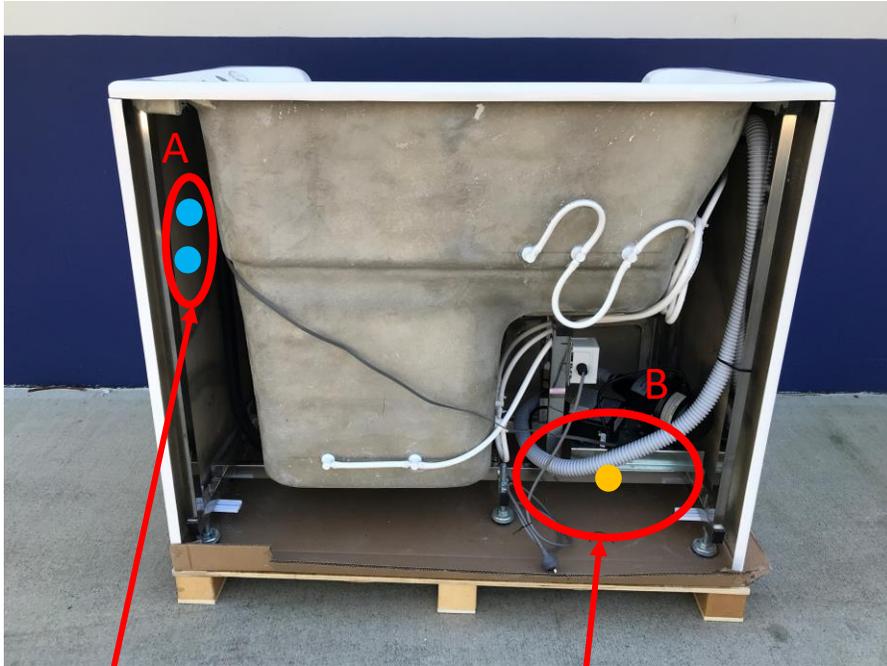

An IP65 (outdoor) rated single power point is required only if the spa option is bought

Suggested water point location A:
800mm from the floor, 80mm from the side panel.
Access circle is 300mm high and 20mm wide


Suggested power point location B:
300mm from the ground, 300mm from the side panel
Access circle is 100mm high and 200mm wide

Each bath is supplied with a high flow spout and ¼ turn tap handles.

These are WaterMark compliant!



The installation start

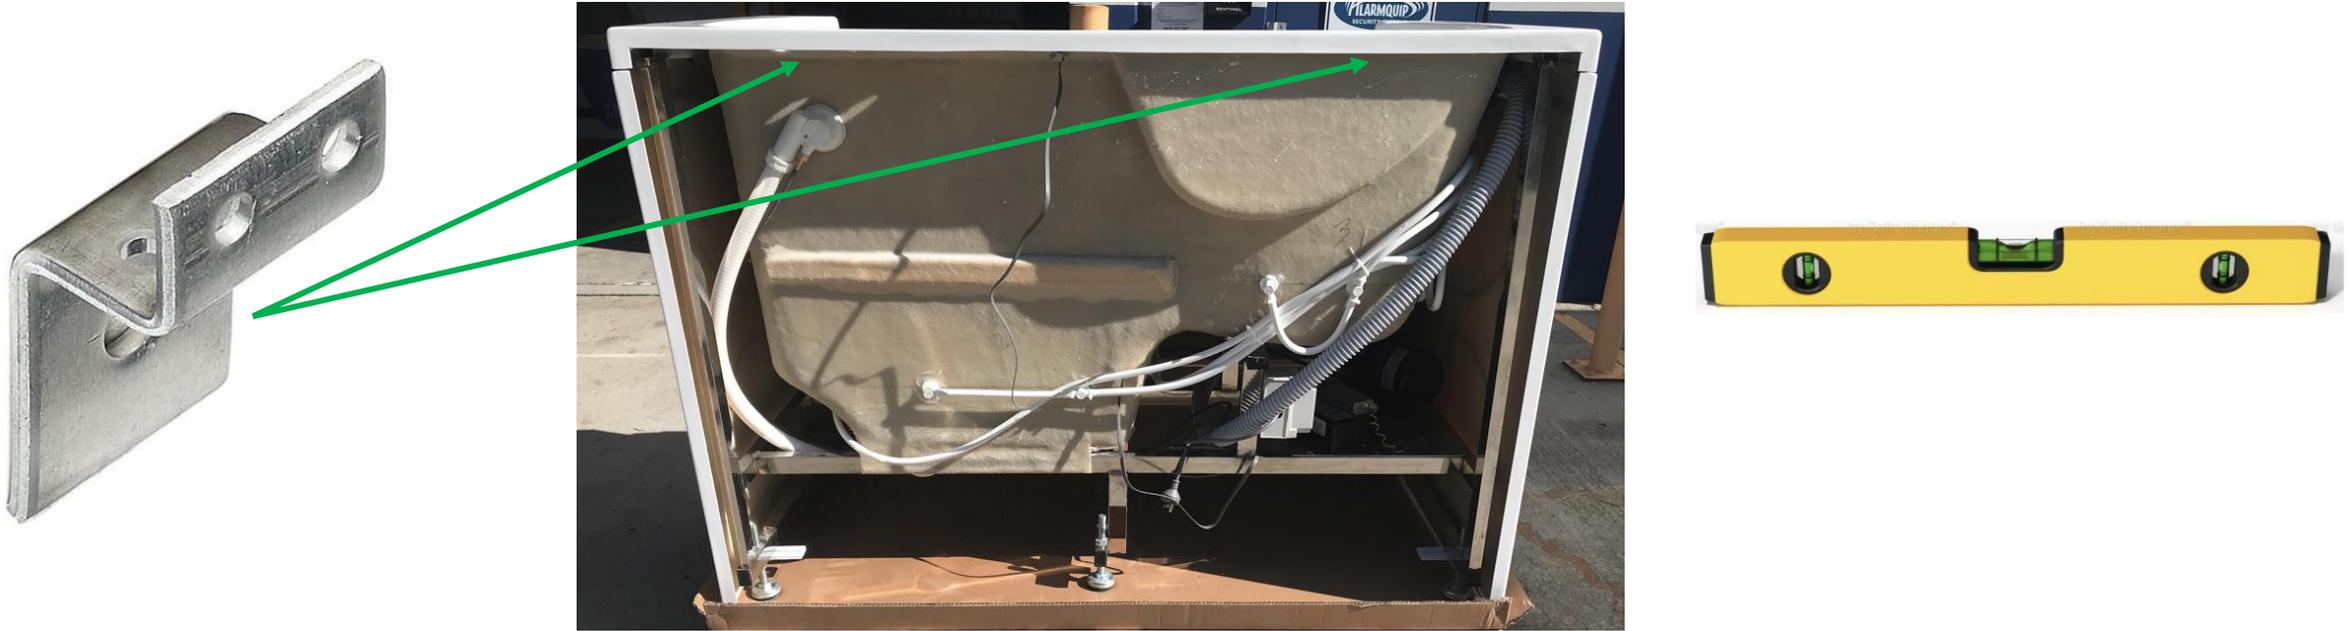

Each bath comes with a drain kit and 2 mounting brackets. These mounting brackets give extra support avoiding the bath coming away from the backwall.


IMPORTANT: The bath needs to be installed **totally level!** Please use a water level for this! A great starting point is to install these mounting brackets on the back wall and make sure these are 100% level installed. Position the back of the bath lip over/on the mounting brackets and adjust each individual bath leg till the bath is completely and accurately level.

The drain kit will be covered a little later in this guide.

Feet adjustment – The front middle leg is key! Use it to adjust the door space so the door closes easily and properly (as the seal then works best!).

When you lower the middle front leg, the front middle of the bath rises and the door gap becomes a little bigger. Bring the middle front leg up, the front middle of the bath lowers and the door gap becomes smaller

This is one of the most important steps in the installation!

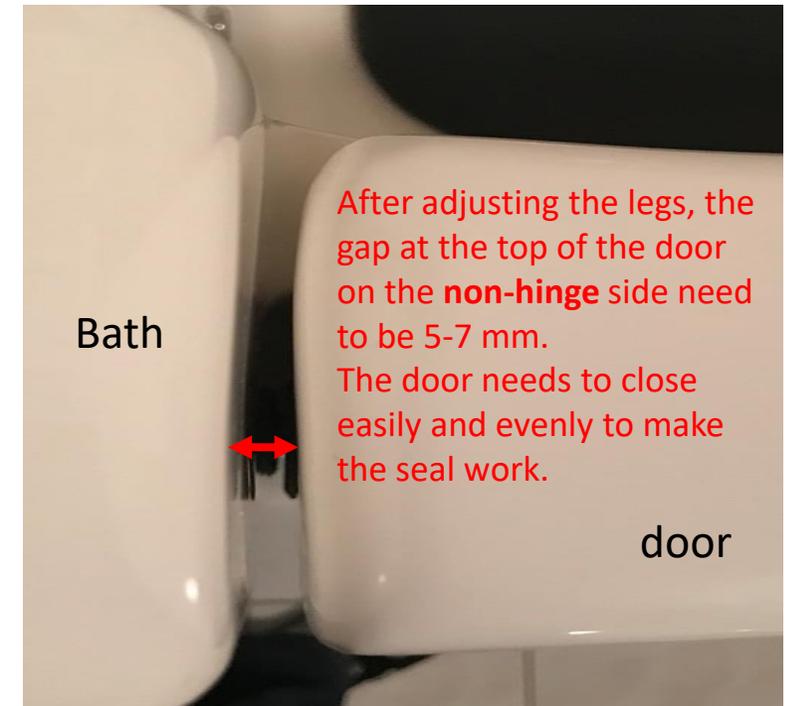

Connecting the waste – each bath is supplied with a 1 meter flexible drain hose. Use this and not a fixed pipe! The hose provides “give” as the bath is a stand alone unit – it avoids risk of leaks





Any questions?

Call/text us on Mob 0455 522 566!

