



The installation Guide of the Windsor Sierra & Acacia model walk-in baths

The ONLY difference between the Sierra and Acacia is the length of the bath!

The Sierra is 1550mm long, 750mm wide and 610mm high – The Acacia is 1700mm long, 750mm wide and 610mm high

These baths are “corner-designed” so two sides are covered (as per photos below) and two sides (Back of bath and side near the door) are open as they are to be installed against the corner of the bathroom.



Right-door option

Left-door option

Sierra & Acacia walk-in bath door selection

Be aware that the shower space, overflow, drain (waste) point and hob location for the tap ware are all on the door end of the bath.



Right-door option

Left-door option




Location hob mounted tapware

Overflow location (joining with the drain/waste point)


Upper view of the Right-door bath showing the hob mount tapware location and overflow, drain (waste) point is not shown on this photo

Transport the bath after delivery:

1. Baths transported upright on the pallet will have screws holding 2 legs of the bath to the pallet. These need to be removed so the bath can come off the pallet.
2. Remove the side panels so you can use the bath frame to move it in its installation spot

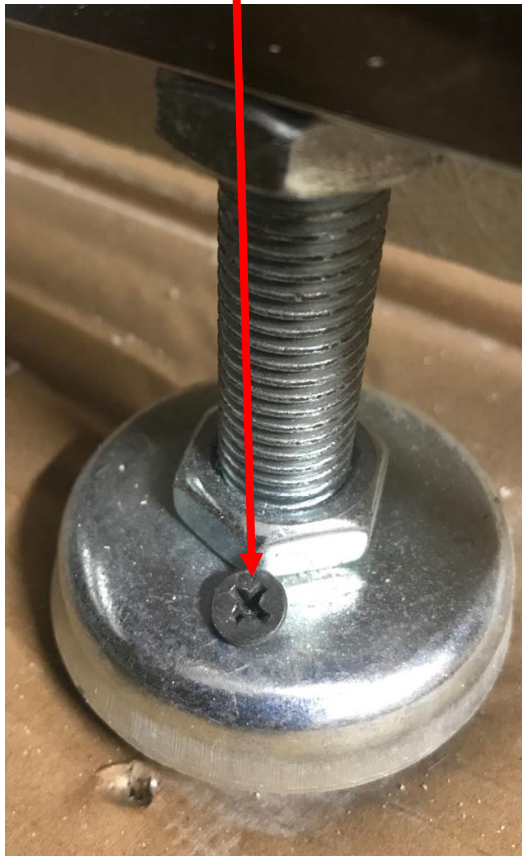

Tap and spa power point installation

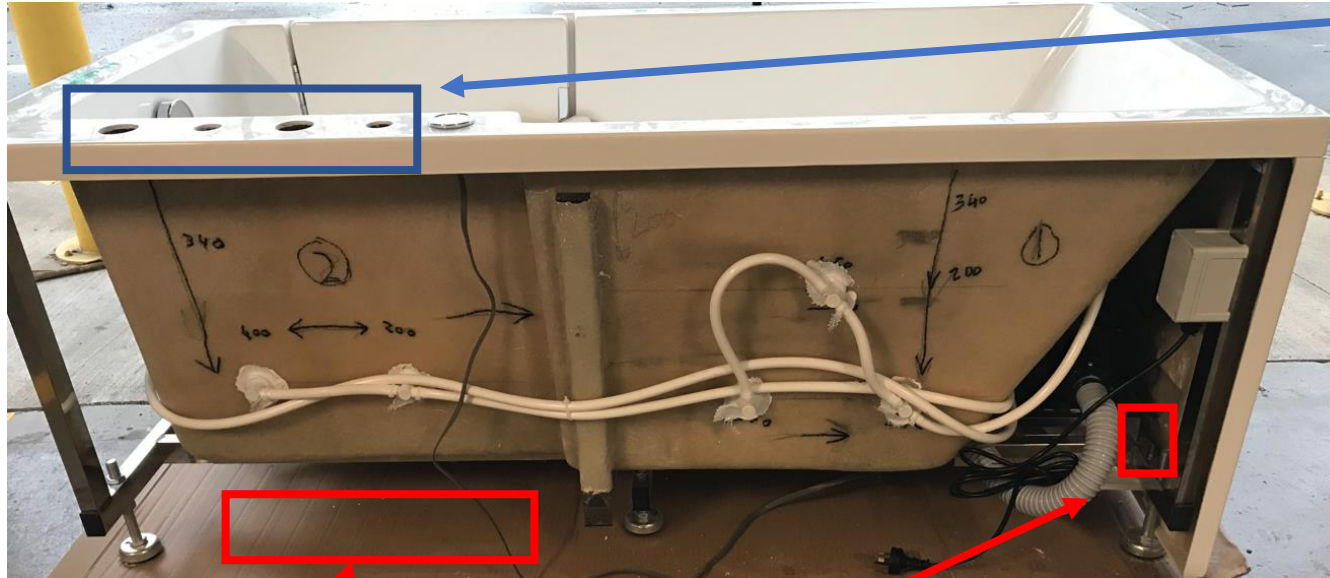

Tapware location – in this case for the advanced tap set (4 holes), standard tap set has 3 holes



An IP65 (outdoor) rated single power point is required only if the spa option is bought
Suggested water point location A:

Suggested power point location B:
200mm from the ground, 90mm from the side panel

Each bath can be supplied (optional) with a high flow Astra-Walker tap ware.

These are WaterMark compliant!



The installation start



Each bath comes with a drain kit and 2 mounting brackets. These mounting brackets give extra support avoiding the bath coming away from the backwall.

IMPORTANT: The bath needs to be installed **totally level!** Please use a water level for this! A great starting point is to install these mounting brackets on the back wall and make sure these are 100% level installed. Position the back of the bath lip over/on the mounting brackets and adjust each individual bath leg till the bath is completely and accurately level.

The drain kit will be covered a little later in this guide.

Connecting the waste – each bath is supplied with a 1 meter flexible drain hose. Use this and not a fixed pipe! The hose provides “give” as the bath is a stand alone unit – it avoids risk of leaks





Any questions?

Call/text us on Mob 0455 522 566!



Right-door option

Left-door option